

Front Panel

This appendix displays the front panel of all switches covered by this guide.

DCS-7048T-A

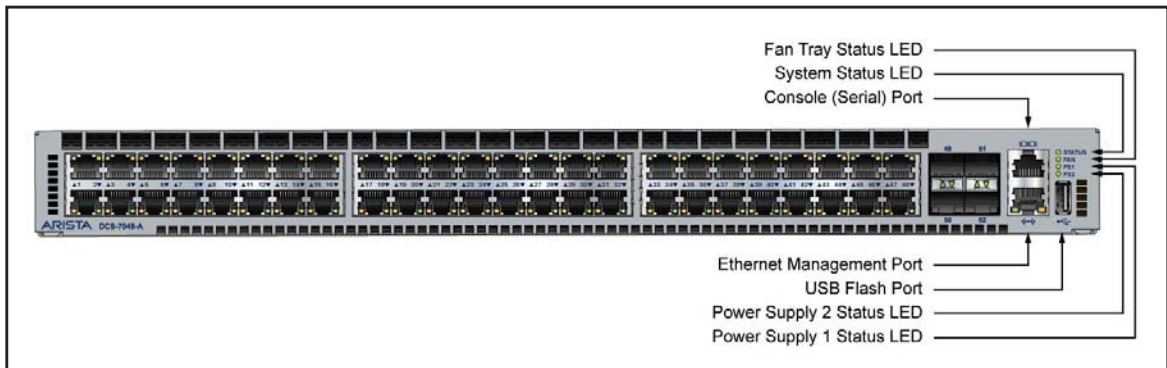


Figure C-1: DCS-7048T-A Front Panel

DCS-7050Q-16

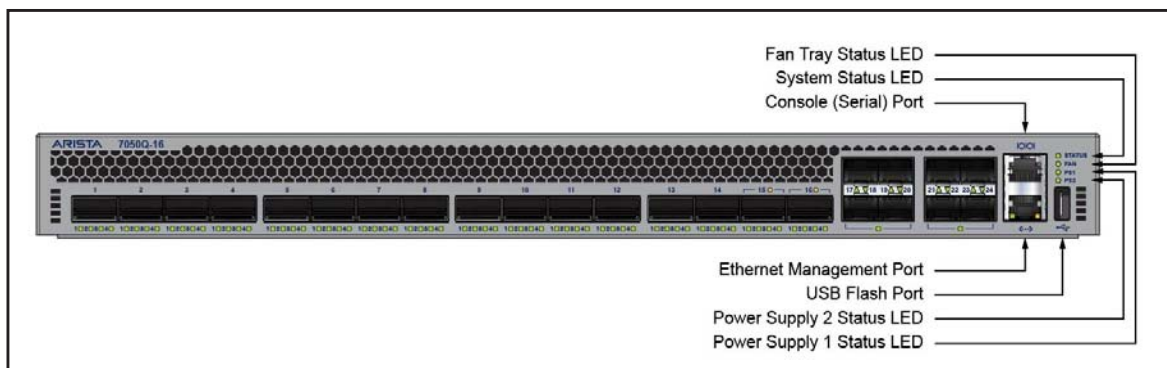


Figure C-2: DCS-7050Q-16 Front Panel

DCS-7050QX-32

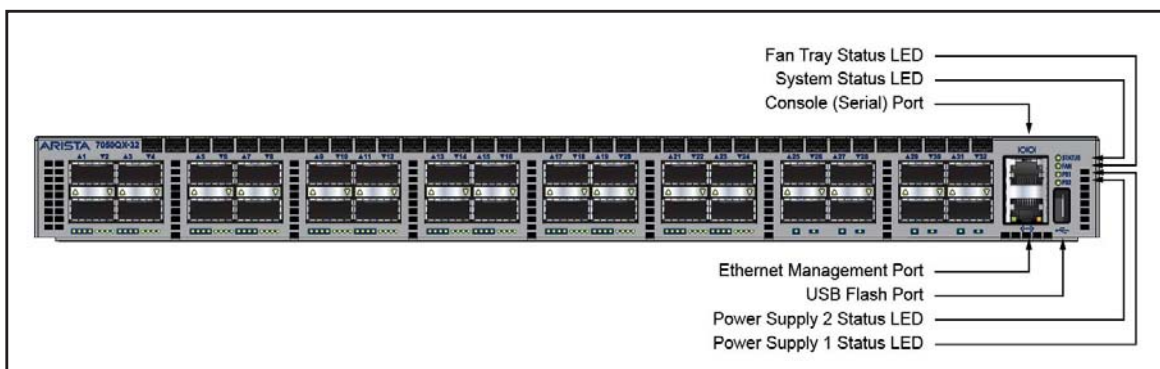


Figure C-3: DCS-7050QX-32 Front Panel

DCS-7050S-52

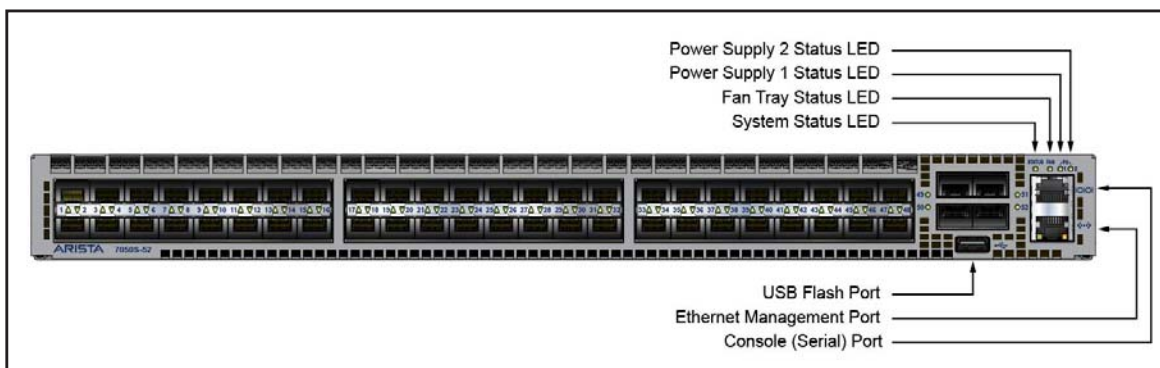


Figure C-4: DCS-7050S-52 Front Panel

DCS-7050S-64

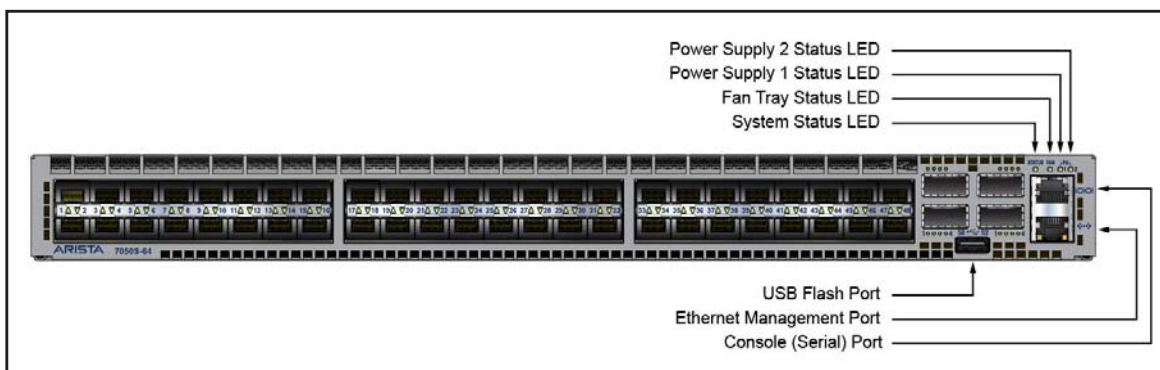


Figure C-5: DCS-7050S-64 Front Panel

DCS-7050T-36

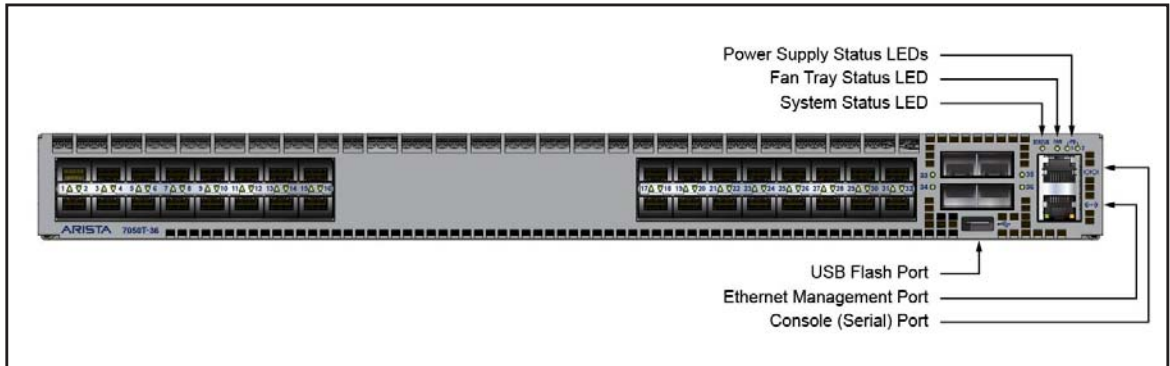


Figure C-6: DCS-7050T-36 Front Panel

DCS-7050T-52

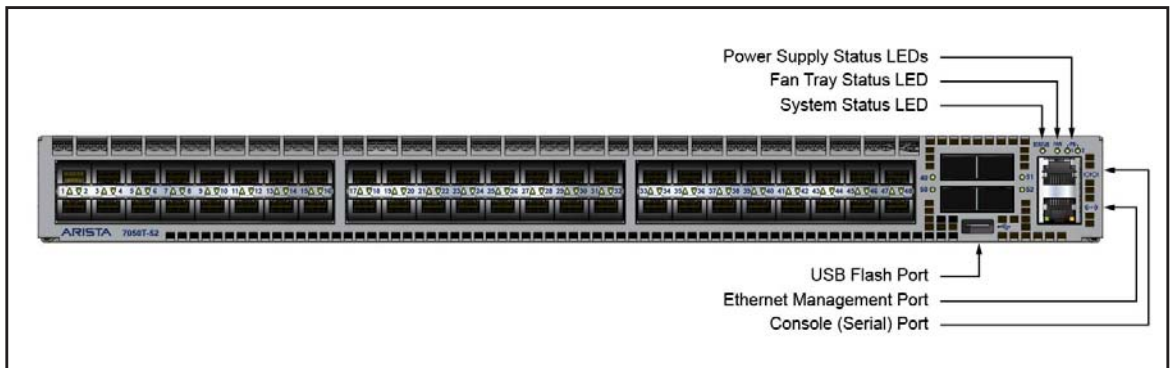


Figure C-7: DCS-7050T-52 Front Panel

DCS-7050T-64

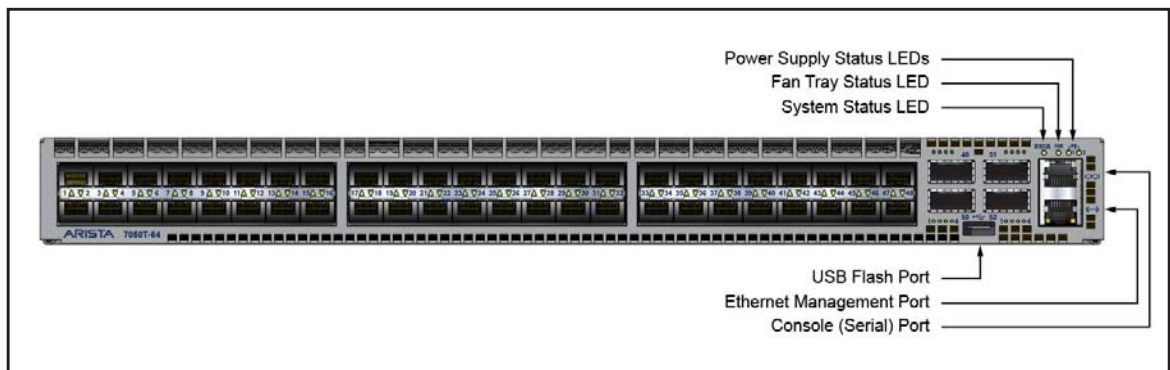


Figure C-8: DCS-7050T-64 Front Panel

DCS-7124FX

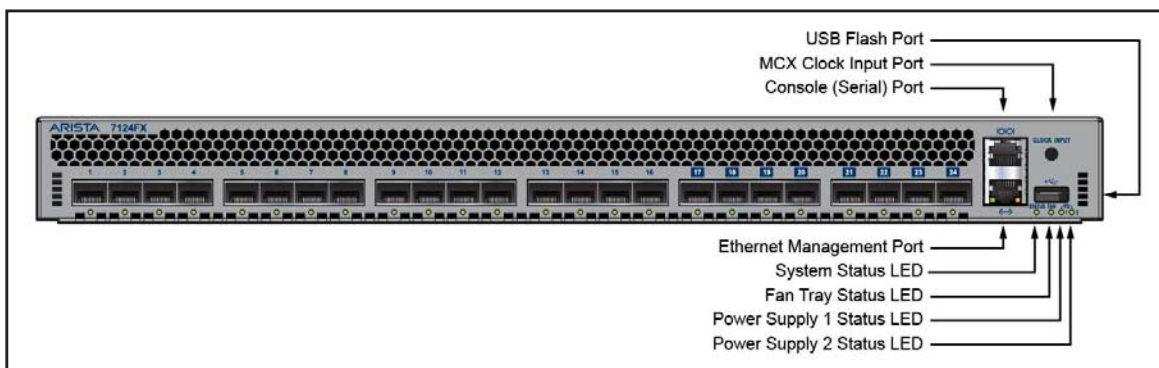


Figure C-9: DCS-7124FX Front Panel

DCS-7124SX

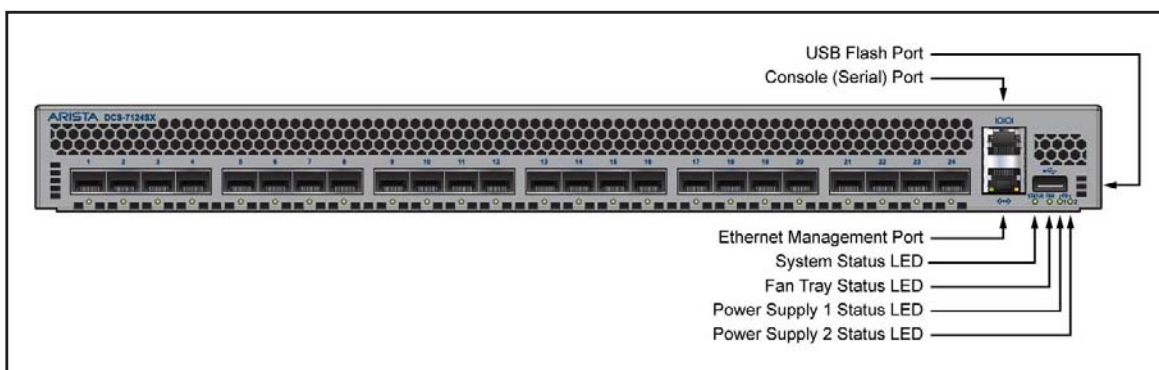


Figure C-10: DCS-7124SX Front Panel

DCS-7150S-24

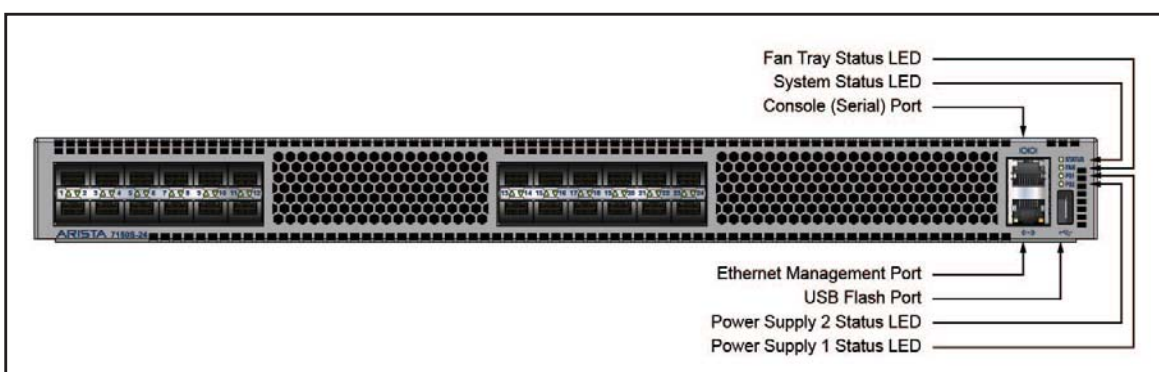


Figure C-11: DCS-7150S-24 Front Panel

DCS-7150S-52

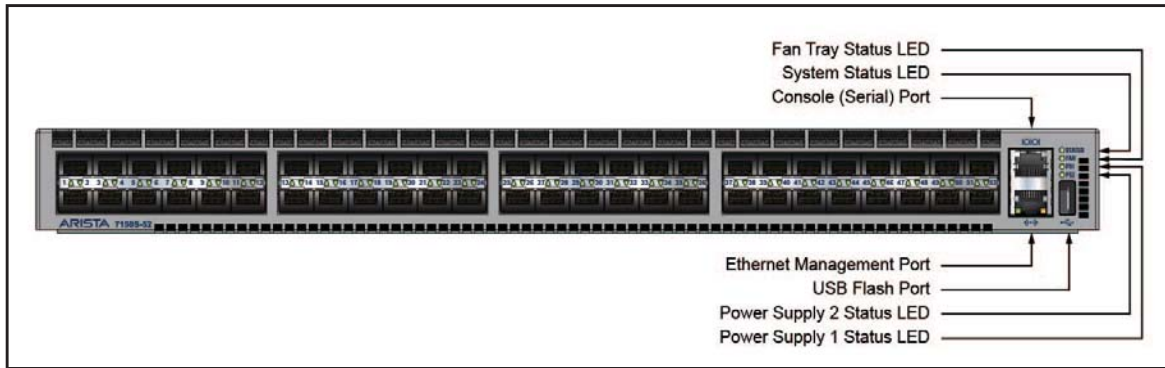


Figure C-12: DCS-7150S-52 Front Panel

DCS-7150S-64

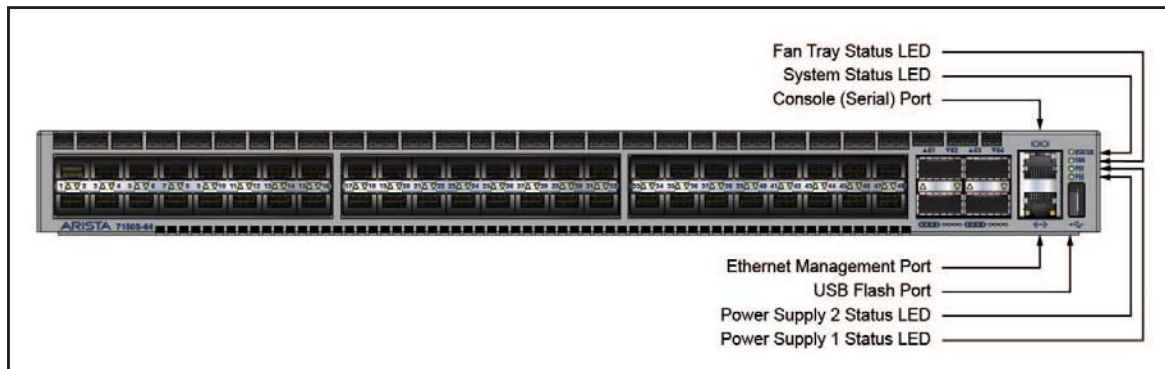


Figure C-13: DCS-7150S-64 Front Panel

